


### Model Selection Switch Settings

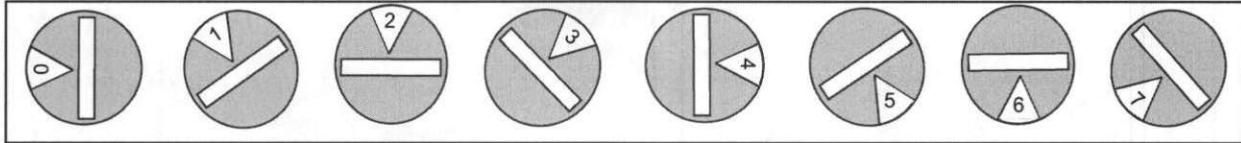

### 3-Speed Control Box Settings - White Label

Setting	0	1	2	3
Action	Steady on 4 of 10 seconds for the first 60 seconds after power up	1 blink every 10 seconds for the first 60 seconds after power up	2 blinks every 10 seconds for the first 60 seconds after power up	<b>Not Used</b>
Model	<b>Diagnostic</b>	<b>1200 FS &amp; 1200-I</b>	<b>1200 FS/Ins +10%*</b>	

Setting	4	5	6	7
Action	4 blinks every 10 seconds for the first 60 seconds after power up	5 blinks every 10 seconds for the first 60 seconds after power up	6 blinks every 10 seconds for the first 60 seconds after power up	7 blinks every 10 seconds for the first 60 seconds after power up
Model	<b>Castile FS Contour FS</b>	<b>Castile FS/I &amp; Contour +10%*</b>	<b>Santa Fe FS/I Castile I</b>	<b>Santa Fe FS/I +10%*</b>

### 4-Speed Control Box Settings - Yellow Label

Settings 4 - 7 are not used

Setting	0	1	2	3
Action	Steady on 4 of 10 seconds for the first 60 seconds after power up	1 blink every 10 seconds for the first 60 seconds after power up	2 blinks every 10 seconds for the first 60 seconds after power up	3 blinks every 10 seconds for the first 60 seconds after power up
Model	<b>Diagnostic</b>	<b>Mt. Vernon</b>	<b>Mt. Vernon +10%*</b>	<b>Mt. Vernon -20%**</b>