



Before your first use, the stove's combustion system must be adjusted by a factory-trained technician.

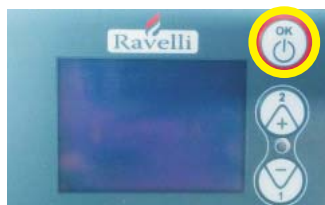

If the screen is grayed out, firmly press the OK button to bring up the Main ("BASE") Display.


Main Display

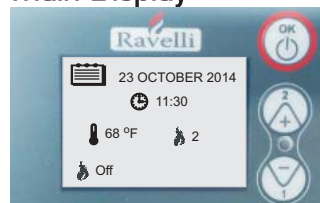

- OK button
- ② or + button
- ① or - button


Note: To return to the Main Display from other menus, press buttons ① and ② simultaneously.

☑ Choose desired room temperature.

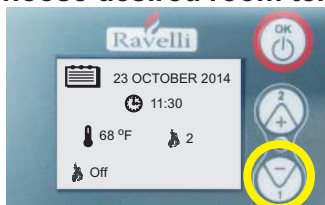


From the Main Display, firmly press and release button ①. You will hear a confirming beep and the Set Temperature screen will be displayed.

1. The temperature setting will be highlighted. Press the + & - buttons until your desired target room temperature is displayed.
2. Press OK.
3. Now the "Sensor consolle" setting will be highlighted. Press "+" to activate the temperature sensor (a check mark will appear in the box).
4. Press OK to return to the Main Display.

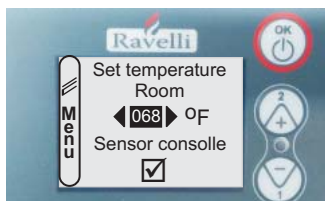


☑ Choose desired power level.

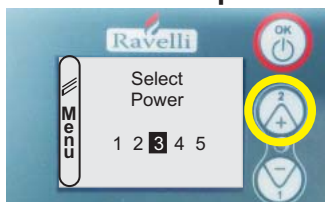

From the Main Display, firmly press and release button ②. You will hear a confirming beep and the Select Power screen will be displayed.

Use the + & - buttons to select the desired power setting, then press OK to return to the Main Display.

☑ Start the stove

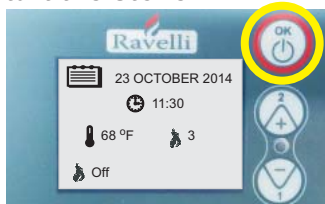


From the Main Display, press and hold the OK button for 3 seconds.

The Status will change from **Off** to:

- 1 - **On** indicates the ignition phase has started, and pellets will drop into the burnpot.
- 2 - **Waiting for flame** - indicates the stove is waiting for ignition to occur
- 3 - **Flame Present** - indicates the pellets have ignited
- 4 - **Working** - The stove has completed startup. Once in WORKING phase, adjustments may be made to the power and temperature settings.

☑ Stop the stove

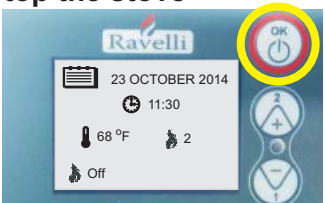


From the Main Display, press and hold the OK button for 3 seconds.

At shutdown, status will change from its Working status to:

- 1 - **Final Cleaning** indicates the stove is beginning to switch off
- 2 - **Cooling / waiting for start (or restart)** - indicates the stove is in its cool-down phase. The stove may be restarted after it has cooled.
- 3 - **Off** - indicates the stove is Off, ready for automatic restart if a program is active (see next page for programming information).

Note: By default, when Sensor consolle is activated, the stove will modulate (drop to its lowest setting when the desired temperature has been reached). To have the stove shut down completely instead, activate "Comfort Clima" (see next page). The icon next to the stove status reading (Off in the illustration above) indicates if stove is in Modulation mode (🔥) or the Comfort Clima Eco-Stop mode (STOP).


- ☑ Access the User Menu by Pressing the OK button from the Main Menu.

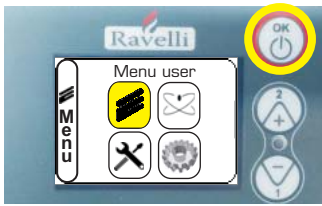

The first menu displayed (shown on left) is the System Menu. Press OK again to select “Menu User” (which will already be highlighted).

- ☑ Choose your preferred operation for when room reaches desired temperature (Hi/Low or On/Off)

With Comfort Clima/(Eco Stop) activated, the stove will operate in On/Off mode, shutting down completely when the room reaches the target temperature. NOTE: This setting will require more frequent inspection and cleaning of the firepot than with Hi/Low mode, and more wear and tear on the igniter. With Eco Stop de-activated, the stove will operate in Hi/Low mode, dropping to the lowest setting when the room reaches the target temperature.

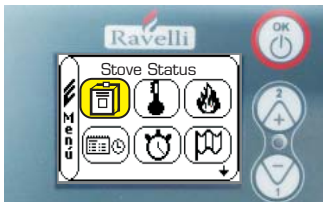

From the User Menu (shown on left), press the + button 6 times to scroll to the “Comfort Clima” option indicated by the ECO STOP icon (this icon is on the 2nd page).

Press OK to enter the Comfort Clima settings screen.

Use the + and - buttons to set your desired differential temperature, then Press OK.

To de-activate Comfort Clima, use the - button to set the value to OFF.




With a differential of x degrees, the stove will shut down completely several minutes (see delay setting) after the room reaches the target temp. The stove will restart when the room temperature drops (x +0.5) degrees.

Use the + and - buttons to set your desired time delay, then Press OK. The time delay sets how long the stove will wait after the room has reached the target temperature to see if the room maintains the desired temperature. If the room maintains the temperature, the stove will shut down.



Press the ① and ② buttons simultaneously to return to the Main Display.

- ☑ Choose your preferred fan noise level.

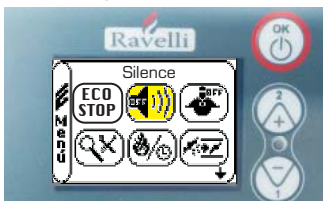


From the Main Display, press the OK button twice to go directly to the User Menu. Press the + button 7 times to scroll to the fan noise setting “Silence”. Press OK to toggle between ON and OFF.

We recommend the Silence ON setting for normal use. Change to the OFF setting for stove operation during extreme cold weather conditions.

Press the ① and ② buttons simultaneously to return to the Main Display.

- ☑ Program your preferred target temperature for up to 4 time periods.

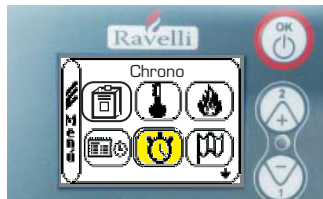

From the Main Display, press the OK button twice to go directly to the User Menu. Press the + button 4 times to scroll to the Chrono icon.

Press OK to enter Chrono to set your time/temperature setbacks.

You may set up to 4 programs.

To Set Program 1, press OK with the cursor on 1.

The cursor will move to the start time hour.

Use the + and - buttons to set the desired hour, in 24-hour format.

Press OK, and the cursor will move to the start time minute.

Continue to enter the desired start and stop time using the + and - buttons, and pressing OK when satisfied with each selection.

With each successive OK, the cursor will move through the days of the week. Press + to select the program to be active on each desired day, Press - to de-activate for the day, and press OK when satisfied with the selection to move to the next day.

Finally, use the + and - buttons to select the desired power level and temperature for this program, pressing OK when the desired setting is displayed.

After you press OK for the desired temperature, Set Program 2 will be displayed.

Follow the same steps to set programs 2,3 and 4. With the cursor on the program #, the + button will move directly to the next program’s settings.



Note: Sensor Console (see Basic Functions page) must be activated for the programs to run.

Press the ① and ② buttons simultaneously to return to the Main Display.